

## M6 Upgrade instructions

### Method 1: Automatic upgrade

1, When the M6 is off, Connect to the computer USB3.0 interface with the USB cable inside the box



2, In my computer, there will be a U disk.



3, Double-click the **Automatic upgrade** file in the current folder.



**Automatic  
upgrade**

4, In the open window, follow the prompts to complete the upgrade.

### Method 2: Manual upgrade

1, When the M6 is off, Connect to the computer USB3.0 interface with the USB cable inside the box



2, In my computer, there will be a U disk.



3, Open the U disk, delete the app.upg file



**app.upg**

4, Copy the app.upg upgrade file from this directory. After the transfer is completed, the upgrade is completed. Unplug the USB.

## M6 升级说明

### 方法一：自动升级

1, M6 关机状态下, 用包装盒内的 USB 线, 连接到电脑 USB3.0 接口



2, 我的电脑里, 会有一个 U 盘出现。



Toolkit (F:)

1, 双击当前文件夹内 **自动升级** 文件。



自动升级.

2, 在打开窗口根据提示信息, 完成升级。

### 方法二：手动升级

1, M6 关机状态下, 用包装盒内的 USB 线, 连接到电脑 USB3.0 接口



2, 我的电脑里, 会有一个 U 盘出现。



Toolkit (F:)

3, 打开 U 盘, 删除 app.upg 文件



app.upg

4, 将本目录 app.upg 升级文件复制进去。待传输完成, 升级就完成。拔掉 USB 即可。